

# SS40REEL

## Installation instruction for mounting Spot Sprayer to Hose Reel

- 1 Remove two packing bolts that are holding Reel to Mount. See Fig 1.
- 2 Install Reel on top of Mount using 4—5/16" x 3/4" Bolts, 4—5/16" Lock Washers, 4—5/16" washers & 4—5/16" Nuts. See Fig 2.

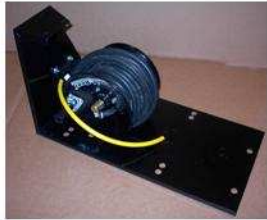


Fig 1



Fig 2

- 3 Lay Hose Reel & Mount on side with Hose Reel Handle facing down. Position Sprayer Tank on to Mount with Pump End of Tank closes to Reel. Align Holes in Mount with Bolt Holes in Tank and fasten in place using 4—5/16" x 3/4" Bolts, 4—3/8" Flat Washers & 4—5/16" Lock Washers. See Fig 3.
- 4 Remove Handgun and Handgun Hose Assembly from Sprayer.
- 5 Install Barb Elbow (NYEL38) in Pump Discharge Hole. Fasten Reel Feed Hose (Yellow Hose) to Barb End with Hose Clamp. See Fig 4.



Fig 3



Fig 4

- 6 Thread Handgun onto Reel Hose. See Fig 3.
- 7 Completed Reel, Mount & Sprayer should look like Fig 5.
- 8 Fill with *WATER ONLY*, start Pump **Check for Leaks and Tighten Fittings if Necessary**

Questions Please Call 800-847-9875



Fig 5

