

Introduction


We are proud to have you as a customer and feel you will be proud to be a Turf Tech equipment owner.

The intent of this manual is to provide you with the knowledge to install and operate a B&B Sprayer, so the operator and environment are safe. These sprayers are designed to handle a large variety of turf chemicals applied with either a boom or spray gun application.

Any piece of equipment needs, and must have a certain amount of service and maintenance to keep it in top running condition. We have attempted to cover all the adjustments required to fit most conditions; however, there may be time when special care must be taken to fit a condition. Correct operation and maintenance will insure the safest and longest life of the sprayer.

Study this operator's manual carefully and become acquainted with all the adjustments and operating procedures before attempting to operate your new equipment. Remember, it is a machine and has been designed and tested to do an efficient job in most operating conditions and will perform in relation to the service it receives. Keep this manual in an accessible place for future usage.

Do not hesitate to call your Dealer or B&B at 402-374-2575 with any questions.

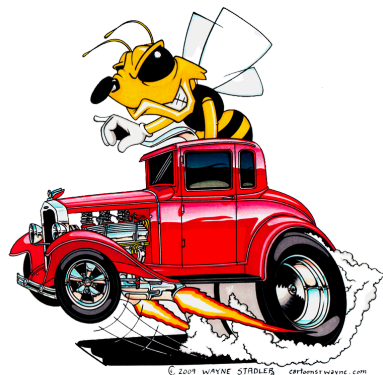

ATTENTION! BECOME ALERT!

YOUR SAFETY IS INVOLVED!



TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHTOUT THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND THE SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH.

TAKE TIME FOR SAFETY

BE A SAFE OPERATOR
AVOID ACCIDENTS BY
THINKING BEFORE ACTING
AND BY READING YOUR OPERATOR'S MANUAL

NOTE: Some illustrations in this manual show units with optional equipment installed. This optional equipment may be purchased from your local B&B dealer.

CAUTION: Some photographs in this manual my show shields or cover panels removed for purposes of clarity. NEVER OPERATE: Unit without all shields and cover panels in place.



AVOID ACCIDENTS



Most accidents, whether they occur in industry, on the farm, at home, or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason most accidents can be prevented by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment, there are many conditions that can not be completely safe guarded against without interfering with reasonable accessibility and efficient operations.

A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT.

THE COMPLETE OBSERVANCE OF ONE SIMPLE RULE WOULD PREVENT MANY THOUSAND SERIOUS INJURIES EACH YEAR THAT RULE IS:

NEVER ATTEMPT TO CLEAN, OIL OR ADJUST A MACHINE WHILE IT IS IN MOTION!

Warranty Policies

WARRANTY INFORMATION

Products manufactured by B & B Technologies are covered by a standard one-year warranty from the original date of purchase or two-years if the Warranty Registration Form is returned. This warranty covers only defective material or workmanship. It does not cover normal wear or maintenance or repair resulting from accident, improper use, chemical damage, or alteration of the product. The cost of normal maintenance, service and repair items shall be paid by the owner.

Under this warranty, B&B shall at its option, either repair or replace, free of charge, any defective part or parts. The part or parts must be returned to B&B within thirty days from the date of failure through the dealer or distributor from whom the product was purchased, transportation charges prepaid.


Every item to be considered for warranty requires warranty authorization from B&B.

Call B&B for specific procedures before part is returned or service work begins.

B&B will make all final decisions regarding warranty reimbursement.

LIQUID CARRYING VESSEL WARRANTY

Liquid-carrying vessels are subject to the applicable warranty only. The loss of chemicals within the vessel is not covered by warranty. Expenses, inconveniences, or other damages that may occur are not subject to warranty consideration. Warranty is void if the vessel or vessel lining failed because of inadequate support of the vessel, misuse or lack of reasonable care, or use of chemical formulations not recommended by the vessel manufacturer. User shall determine the suitability of the product for his intended use and assume all risks and liability in connection therewith.

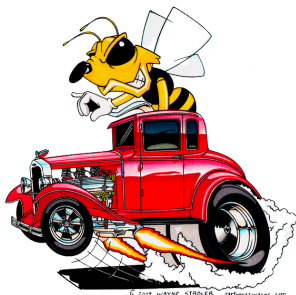

EQUIPMENT SAFETY GUIDELINE



Safety of the operator was the main concern when we were designing and developing this sprayer. We designed and manufactured in as many safety features as possible. However, every year many accidents occur which could have been avoided by a few seconds of thought and a more careful approach to handling equipment. You, the operator, can avoid many accidents by observing the following precautions in this section. To avoid personal injury, study the following precautions and insist those working with your, or for you, follow them.

In order to provide a better view, certain photographs or illustrations in this manual may show an assembly with a safety shield removed. However, equipment should never be operated in this condition. Keep all shields in place. If shield removal becomes necessary for repairs, replace the shield prior to use.

Replace any **CAUTION, WARNING, DANGER** or instruction safety decal that is not readable or is missing.

Do not attempt to operate this equipment under the influence of drugs or alcohol.

Review the safety instructions with all users annually.

This equipment is dangerous to children or persons unfamiliar with its operation. The operator should be a responsible adult familiar with equipment and trained in this equipment's operations. Do not allow persons to operate or assemble this unit until they have read this manual and have developed a thorough understanding of the safety precautions and how it works.

Never exceed the limits of a piece of machinery. If its ability to do a job, or to do so safely, is in question —**DON'T TRY IT.**

SAFETY SIGN CARE



- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or have become illegible.
- Replaced parts that displayed a safety sign should also display the current sign.
- Safety signs are available from your Distributor or Dealer Parts Department or the factory.

How to Install Safety Signs:

- Be sure that the installation area is clean and dry.
- Decide on the exact position before you remove the backing paper.
- Remove the smallest portion of the split backing paper.
- Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
- Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
- Small air pockets can be pierced with a pin and smoothed out using the piece of decal backing paper.

TIRE SAFETY



- Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death.
- Do not attempt to mount a tire unless you have the proper equipment and experience to do the job.
- Inflating or servicing tires can be dangerous. Whenever possible, trained personnel should be called to service and/or mount tires.
- Always order and install tires and wheels with appropriate capacity to meet or exceed the anticipated weight to be placed on the equipment.

PERSONAL SAFETY



- Always mix and handle pesticides very carefully to prevent accidental spills or poisoning. (if a spill should occur, clean it up in accordance with state, federal, and local laws. If ingestion of the pesticide occurs read the label and call a doctor immediately.)
- Wear protective clothing and other devices (gloves, goggles, respirators, etc.) as specified on the pesticide label.
- Do not breathe mists, vapors or dust from pesticides when handling, mixing or applying them.
- Wash hands and face thoroughly after handling any pesticides and especially before eating, drinking, or smoking.
- Treat all clothing worn while handling or applying pesticides as contaminated!
Handle ALL contaminated clothing with gloves.
Wash clothing daily and separately from the family wash.
Pre-rinse, presoak, pretreat with a stain remover.
Use HOT water.
Use the highest water level.
Use the longest wash cycle.
Use heavy-duty liquid detergent.
Line dry.
Washing clothing 2-3 times if heavily soiled or if pesticides are highly toxic, or consider discarding
After washing, run the machine through a complete cycle with detergent.
- Proper handling of pesticides results in safety for you and your environment.
Remember—**ALWAYS READ AND FOLLOW THE PESTICIDE LABEL!**

PESTICIDE PRECAUTIONS



- Read the label.....read the label.
- Re-read the label.
- Use the pesticides strictly following the directions on the label.
- Store all pesticides in original containers with labels attached in a dry, well vented room or building.
- Post warning signs for pesticide storage in accordance with existing laws.
- Never leave pesticides open near children, pets or unauthorized personnel.
- Always triple rinse containers.
- Empty and dispose of containers according to existing laws.
- Be sure to keep required records of all pesticide applications.

REMEMBER:

Your best assurance against accidents is a careful and responsible operator. If there is any portion of this manual or function you do not understand, contact your local authorized dealer or manufacturer.

BEFORE OPERATION:



- Carefully study and understand manual.
- Do not wear loose-fitting clothing which may catch in moving parts.
- Always wear protective clothing and substantial shoes.
- It is recommended that suitable protective hearing and (eye protection) sight protectors be worn.
- The operator may come in contact with certain materials which may require specific safety equipment, relative to the handling of such materials (examples: extremely dusty, molds, fungus, fertilizers, etc.)
- Keep wheel lug nuts or bolts tightened to specified torque.
- Assure that tires are inflated evenly.
- Give the unit a visual inspection for any loose bolts, loose straps, worn parts or cracked welds, and make necessary repairs. Follow the maintenance safety instructions included in this manual.
- Be sure that there are no tools lying on or in the equipment.
- Do not use the unit until you are sure that the area is clear, especially children and animals.
- Because it is possible that this equipment may be used in dry areas or in the presence of combustibles, special precautions should be taken to prevent fires and fire fighting equipment should be readily available.

Add · Don't hurry the learning process or take the unit for granted. Ease into it and become familiar with your new equipment.

- Practice operation of your equipment and its attachments. Completely familiarize yourself and other operators with its operation before using.

DURING OPERATION:



- NO PASSENGERS ALLOWED—Do not carry passengers anywhere on the equipment, except as required for operation.
- Keep hands and clothing clear of moving parts.
- Do not clean, lubricate or adjust your equipment while it is moving.
- When halting operation, even periodically, set the towing vehicles brakes, disengage the PTO, shut off the engine and remove the ignition key.
- Be especially observant of the operating area and terrain—watch for holes, rocks or other hidden hazards. Always inspect the area prior to operation.

· DO NOT MAKE SHORT TURNS AT HIGH SPEEDS!! BE EXTRA CAREFUL ON SLOPES

- Be sure sprayer is turned on only to spray targeted areas.
- When spraying always be careful of the temperature, wind and wind direction to avoid possible drift or volatilization of target areas.
- Be sure to clean sprayer thoroughly before switching from herbicides to insecticides to fungicides.

· WARNING The shifting of water on slopes may cause the vehicle to overturn—never make sharp turns at accelerated speeds on slopes.

- Avoid overhead wires or other obstacles. Contact with overhead lines could cause serious injury or death.
- Never stand alongside of unit with engine running or attempt to start engine and/or operate machine while standing alongside of unit.

FOLLOWING OPERATION:



- Clean sprayer thoroughly before switching from herbicides to insecticides to fungicides.
- Store the unit in an area away from human activity.
- Do not permit children to play on or around the unit.
- Make sure all parked machines are on a hard, level surface and engage all safety devices.

PERFORMING MAINTENANCE:

- Make sure there is plenty of ventilation. Never operate the vehicle in a closed building. The exhaust fumes may cause asphyxiation.
- Before working on this machine, stop the vehicle, set the brakes, disengage the PTO and all power drives, shut off the engine and remove the ignition keys.
- Be certain all moving parts on attachments have come to a complete stop before attempting to perform maintenance.
- Always use a safety support and block the wheels. Never use a jack to support the machine.
- Always use the proper tools or equipment for the job at hand.
- Use extreme caution when making adjustments.
- Never use your hands to locate a hydraulic leak on attachments. Use a small piece of cardboard or wood. Hydraulic fluid escaping under pressure can penetrate the skin.
- When disconnecting hydraulic lines, shut off hydraulic supply and relieve all hydraulic pressure.
- Openings in the skin and minor cuts are susceptible to infection from hydraulic fluid. If injured by escaping hydraulic fluid, see a doctor at once. **Gangrene can result. Without immediate medical treatment, serious infection and reactions can occur.**
- Replace all shields and guards after servicing and before moving.
- After servicing, be sure all tools, parts and service equipment are removed.
- Do not allow grease or oil to build up on any step or platform.
- Never replace hex bolts with less than grade five bolts unless otherwise specified. Refer to bolt torque chart for head identification marking.
- Where replacement parts are necessary for periodic maintenance and servicing, genuine factory replacement parts must be used to restore your equipment to original specifications. The manufacturer will not claim responsibility for use of unapproved parts and/or accessories and other damages as a result of their use.
- If equipment has been altered in any way from original design, the manufacturer does not accept any liability for injury or warranty.
- A fire extinguisher and first aid kit should be kept readily accessible while performing maintenance.

WINTERIZING YOUR SPRAYER


When winterizing your sprayer, dispose of any unused chemical according to chemical manufacturer's recommendations. Flush out tank and pump, preferably with a neutralizing solution. Then pump a 50-50 mixture of RV anti-freeze and water throughout the system until it comes out the handgun and/or boom. Your sprayer is now ready for winter. Do NOT use motor oil, diesel fuel, etc., to lubricate your sprayer as these can damage the pump seals and gaskets throughout the sprayer.

BOOMINATOR®

All Regular Pattern Spray Nozzles were tested at a height of 36 inches. (Recommended operating height is between 18 & 48 inches.)

SPRAY NOZZLES REGULAR PATTERN

* Water was used for all calculations listed.

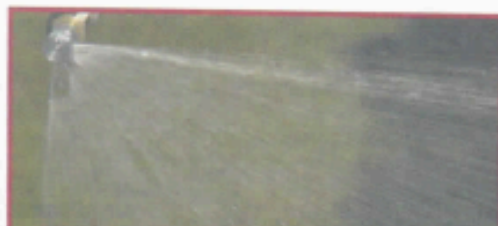

REGULAR PATTERN SPRAY NOZZLES

Right hand nozzle shown in photo

1160 RIGHT or LEFT	(1/4" MNPT)			SPEED (MPH)								
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7			
				GALLONS PER ACRE								
				20	1.0	16 ft.	15.5	10	8	6	5	4.5
				30	1.2	16 ft.	18.5	12.5	9	7.5	6	5.5
40	1.4	16 ft.	21.5	14.5	11	8.5	7	6				

1250 RIGHT or LEFT	(1/4" MNPT)			SPEED (MPH)									
	PSI	GPM	SPRAY PATTERN	1	2	3	4	5	6	7			
				GALLONS PER ACRE									
				20	1.5	16 ft.	46	23	16	12	9	8	7
				30	1.7	16 ft.	53	26	18	13	11	9	8
40	2.0	16 ft.	62	31	21	16	12	10	9				

1400 RIGHT or LEFT	(1/4" MNPT)			SPEED (MPH)													
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12			
				GALLONS PER ACRE													
				20	1.7	17 ft.	25	17	12	10	8	7	6	5.5	5	4.5	4
				30	2.0	17 ft.	30	19	15	12	10	8	7	6.5	6	5	4.5
40	2.5	17 ft.	36	24	18	15	12	10	9	8	7	6.5	6				

1870 RIGHT or LEFT	(1/4" MNPT)			SPEED (MPH)													
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12			
				GALLONS PER ACRE													
				20	3.0	18 ft.	41	28	21	17	14	12	10	9	8	7.5	7
				30	3.5	18 ft.	48	32	24	19	16	14	12	11	10	9	8
40	4.3	18 ft.	59	39	30	24	20	17	15	13	12	11	10				

2650 RIGHT or LEFT	(1/2" MNPT)			SPEED (MPH)																
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
				GALLONS PER ACRE																
				20	6.7	20 ft.	83	55	41	33	28	24	21	18	16	15	14	13	12	11
				30	7.5	20 ft.	93	62	46	37	32	26	23	20	18	17	15	14	13	12
40	8.5	20 ft.	105	70	52	42	35	30	26	23	21	19	17	16	15	14				

3120 RIGHT or LEFT	(1/2" MNPT)			SPEED (MPH)																
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
				GALLONS PER ACRE																
				20	7.2	21 ft.	85	56	42	34	28	24	21	19	17	15	14	13	12	11
				30	9.0	21 ft.	106	71	53	42	35	30	26	23	21	19	17	16	15	14
40	10.6	21 ft.	125	83	62	50	41	36	31	28	25	23	21	19	18	16				

3750 RIGHT or LEFT	(1/2" MNPT)			SPEED (MPH)																
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
				GALLONS PER ACRE																
				20	12.0	22 ft.	135	90	67.5	54	45	38.5	34	30	27	24.5	22.5	21	19	18
				30	14.0	22 ft.	157	105	79	63	52.5	45	39	35	31.5	29	26	24	22.5	21
40	15.0	22 ft.	169	113	84	67.5	56	48	42	37.5	34	31	28	26	24	22.5				





















4370 RIGHT or LEFT	(1/2" MNPT)			SPEED (MPH)																
	PSI	GPM	SPRAY PATTERN	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
				GALLONS PER ACRE																
				20	13.0	23 ft.	140	93	70	56	47	40	35	31	28	25	23	22	20	19
				30	15.5	23 ft.	167	112	83	67	56	48	42	37	33	30	28	26	24	22
40	17.5	23 ft.	188	126	94	75	63	54	47	42	38	34	31	29	27	25				

Greenleaf TurboDrop® XL Nozzle Tabulations

Turbodrop® nozzles consist of two primary components - the Venturi air injector and the exit pattern tip. The orifice in the ISO color-coded Venturi determines the flow rate of the complete assembly. The exit pattern tip does not affect flow rate; it is only used to form the desired spray pattern. Targeting 60 psi when selecting the nozzle size will allow for greater changes in speed and pressure.

Pressure Range: 20-120 psi.

Recommended boom height: 18-36" (with 20" nozzle spacing)

COMPLETE NOZZLE # (strainer size) Venturi #/Tip #	LIQUID PRESSURE PSI	NOZZLE CAPACITY GPM	GALLONS PER ACRE BASED ON 20" NOZZLE SPACING*									
			4 MPH	5 MPH	6 MPH	8 MPH	10 MPH	12 MPH	14 MPH	16 MPH	18 MPH	20 MPH
 TDXL11001 TDCXL11001 (use 50 mesh)  TDXLV01 (Venturi Part #) use 02 tip	20	0.07	5.2	4.2	3.5	2.6	2.1	1.7	1.5	1.3	1.2	1.0
	30	0.09	6.4	5.1	4.3	3.2	2.6	2.1	1.8	1.6	1.4	1.3
	40	0.10	7.4	5.9	4.9	3.7	3.0	2.5	2.1	1.9	1.6	1.5
	50	0.11	8.3	6.6	5.5	4.1	3.3	2.8	2.4	2.1	1.8	1.7
	60	0.12	9.1	7.3	6.1	4.5	3.6	3.0	2.6	2.3	2.0	1.8
	80	0.14	10.5	8.4	7.0	5.2	4.2	3.5	3.0	2.6	2.3	2.1
	100	0.16	11.7	9.4	7.8	5.9	4.7	3.9	3.4	2.9	2.6	2.3
 TDXL110015 TDCXL110015 (use 50 mesh)  TDXLV015 (Venturi Part #) use 03 tip	20	0.11	7.9	6.3	5.2	3.9	3.1	2.6	2.2	2.0	1.7	1.6
	30	0.13	9.6	7.7	6.4	4.8	3.9	3.2	2.8	2.4	2.1	1.9
	40	0.15	11.1	8.9	7.4	5.6	4.5	3.7	3.2	2.8	2.5	2.2
	50	0.17	12.4	10.0	8.3	6.2	5.0	4.1	3.6	3.1	2.8	2.5
	60	0.18	13.6	10.9	9.1	6.8	5.5	4.5	3.9	3.4	3.0	2.7
	80	0.21	15.7	12.6	10.5	7.9	6.3	5.2	4.5	3.9	3.5	3.1
	100	0.24	17.6	14.1	11.7	8.8	7.0	5.9	5.0	4.4	3.9	3.5
 TDXL11002 TDCXL11002 (use 50 mesh)  TDXLV02 (Venturi Part #) use 04 tip	20	0.14	10.5	8.4	7.0	5.2	4.2	3.5	3.0	2.6	2.3	2.1
	30	0.17	12.9	10.3	8.6	6.4	5.1	4.3	3.7	3.2	2.9	2.6
	40	0.20	14.8	11.9	9.9	7.4	5.9	4.9	4.2	3.7	3.3	3.0
	50	0.22	16.6	13.3	11.1	8.3	6.6	5.5	4.7	4.1	3.7	3.3
	60	0.24	18.2	14.5	12.1	9.1	7.3	6.1	5.2	4.5	4.0	3.6
	80	0.28	21.0	16.8	14.0	10.5	8.4	7.0	6.0	5.2	4.7	4.2
	100	0.32	23.5	18.8	15.6	11.7	9.4	7.8	6.7	5.9	5.2	4.7
 TDXL110025 TDCXL110025 (use 50 mesh)  TDXLV025 (Venturi Part #) use 05 tip	20	0.18	13.1	10.5	8.7	6.6	5.2	4.4	3.7	3.3	2.9	2.6
	30	0.22	16.1	12.9	10.7	8.0	6.4	5.4	4.6	4.0	3.6	3.2
	40	0.25	18.5	14.8	12.4	9.3	7.4	6.2	5.3	4.6	4.1	3.7
	50	0.28	20.7	16.6	13.8	10.4	8.3	6.9	5.9	5.2	4.6	4.1
	60	0.31	22.7	18.2	15.1	11.4	9.1	7.6	6.5	5.7	5.0	4.5
	80	0.35	26.2	21.0	17.5	13.1	10.5	8.7	7.5	6.6	5.8	5.2
	100	0.40	29.3	23.5	19.6	14.7	11.7	9.8	8.4	7.3	6.5	5.9
 TDXL11003 TDCXL11003 (use 50 mesh)  TDXLV03 (Venturi Part #) use 06 tip	20	0.21	15.7	12.6	10.5	7.9	6.3	5.2	4.5	3.9	3.5	3.1
	30	0.26	19.3	15.4	12.9	9.6	7.7	6.4	5.5	4.8	4.3	3.9
	40	0.30	22.3	17.8	14.8	11.1	8.9	7.4	6.4	5.6	4.9	4.5
	50	0.34	24.9	19.9	16.6	12.4	10.0	8.3	7.1	6.2	5.5	5.0
	60	0.37	27.3	21.8	18.2	13.6	10.9	9.1	7.8	6.8	6.1	5.5
	80	0.42	31.5	25.2	21.0	15.7	12.6	10.5	9.0	7.9	7.0	6.3
	100	0.47	35.2	28.2	23.5	17.6	14.1	11.7	10.1	8.8	7.8	7.0
 TDXL11004 TDCXL11004 (use 24 mesh)  TDXLV04 (Venturi Part #) use 08 tip	20	0.28	21.0	16.8	14.0	10.5	8.4	7.0	6.0	5.2	4.7	4.2
	30	0.35	25.7	20.6	17.1	12.9	10.3	8.6	7.3	6.4	5.7	5.1
	40	0.40	29.7	23.7	19.8	14.8	11.9	9.9	8.5	7.4	6.6	5.9
	50	0.45	33.2	26.5	22.1	16.6	13.3	11.1	9.5	8.3	7.4	6.6
	60	0.49	36.3	29.1	24.2	18.2	14.5	12.1	10.4	9.1	8.1	7.3
	80	0.57	42.0	33.6	28.0	21.0	16.8	14.0	12.0	10.5	9.3	8.4
	100	0.63	46.9	37.5	31.3	23.5	18.8	15.6	13.4	11.7	10.4	9.4
 TDXL11005 TDCXL11005 (use 24 mesh)  TDXLV05 (Venturi Part #) use 10 tip	20	0.35	26.3	21.0	17.5	13.1	10.5	8.8	7.5	6.6	5.8	5.3
	30	0.43	32.2	25.7	21.4	16.1	12.9	10.7	9.2	8.0	7.1	6.4
	40	0.50	37.1	29.7	24.8	18.6	14.9	12.4	10.6	9.3	8.3	7.4
	50	0.56	41.5	33.2	27.7	20.8	16.6	13.8	11.9	10.4	9.2	8.3
	60	0.61	45.5	36.4	30.3	22.7	18.2	15.2	13.0	11.4	10.1	9.1
	80	0.71	52.5	42.0	35.0	26.3	21.0	17.5	15.0	13.1	11.7	10.5
	100	0.79	58.7	47.0	39.2	29.4	23.5	19.6	16.8	14.7	13.1	11.7
 TDXL11006 TDCXL11006 (use 24 mesh)  TDXLV06 (Venturi Part #) use 12 tip	20	0.42	31.5	25.2	21.0	15.8	12.6	10.5	9.0	7.9	7.0	6.3
	30	0.52	38.6	30.9	25.7	19.3	15.4	12.9	11.0	9.6	8.6	7.7
	40	0.60	44.6	35.7	29.7	22.3	17.8	14.9	12.7	11.1	9.9	8.9
	50	0.67	49.8	39.9	33.2	24.9	19.9	16.6	14.2	12.5	11.1	10.0
	60	0.74	54.6	43.7	36.4	27.3	21.8	18.2	15.6	13.6	12.1	10.9
	80	0.85	63.0	50.4	42.0	31.5	25.2	21.0	18.0	15.8	14.0	12.6
	100	0.95	70.5	56.4	47.0	35.2	28.2	23.5	20.1	17.6	15.7	14.1
 TDXL11008 TDCXL11008  TDXLV08 (Venturi Part #) use 16 tip	20	0.56	41.8	33.5	27.9	20.9	16.7	13.9	12.0	10.5	9.3	8.4
	30	0.69	51.2	41.0	34.2	25.6	20.5	17.1	14.6	12.8	11.4	10.2
	40	0.80	59.2	47.3	39.4	29.6	23.7	19.7	16.9	14.8	13.1	11.8
	50	0.89	66.2	52.9	44.1	33.1	26.5	22.1	18.9	16.5	14.7	13.2
	60	0.98	72.5	58.0	48.3	36.2	29.0	24.2	20.7	18.1	16.1	14.5
	80	1.13	83.7	66.9	55.8	41.8	33.5	27.9	23.9	20.9	18.6	16.7
	100	1.26	93.6	74.8	62.4	46.8	37.4	31.2	26.7	23.4	20.8	18.7
 TDXL11010 TDCXL11010  TDXLV10 (Venturi Part #) use 20 tip	20	0.71	52.5	42.0	35.0	26.2	21.0	17.5	15.0	13.1	11.7	10.5
	30	0.87	64.3	51.4	42.8	32.1	25.7	21.4	18.4	16.1	14.3	12.9
	40	1.00	74.2	59.4	49.5	37.1	29.7	24.7	21.2	18.5	16.5	14.8
	50	1.12	83.0	66.4	55.3	41.5	33.2	27.7	23.7	20.7	18.4	16.6
	60	1.22	90.9	72.7	60.6	45.4	36.3	30.3	26.0	22.7	20.2	18.2
	80	1.41	104.9	83.9	70.0	52.5	42.0	35.0	30.0	26.2	23.3	21.0
	100	1.58	117.3	93.9	78.2	58.7	46.9	39.1	33.5	29.3	26.1	23.5
	120	1.73	128.5	102.8	85.7	64.3	51.4	42.8	36.7	32.1	28.6	25.7

Shaded area represents best drift control range.

Table based on spraying water at 70° F.

Flow rates may vary + 5%.

*For alternate nozzle spacings, use the following formula:

$$\frac{20'' \text{ spacing}}{\text{New nozzle spacing}} \times \text{Given GPA rate for 20'' spacing} = \text{New GPA rate}$$